



For correct installation of the SafeSeal cap, please follow the following procedure.

For closing the cable ties, we recommend the manual processing tool with metal housing type MK6, up to a tie width of 9 mm, from manufacturer HellermannTyton.

However, also commercially available cable tie tools can be used, suitably for tie width of 7mm.

1



2



3



Step 1-3:

Fit the SafeSeal cap on the SafeSeal closure, until it snaps and the interface is covered.


4



5



6

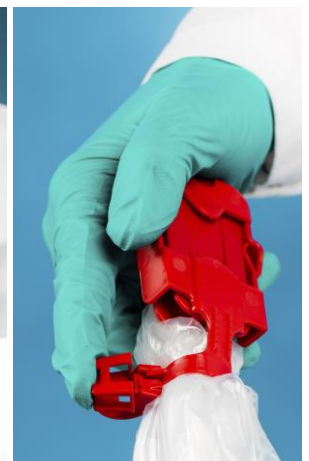

Step 4:

Tying the cable tie around the film.

Step 5:

Tighten the cable tie with the tool.

Step 6:

Put on the protective cover on the interface of the cable tie.